

3.2.20.4.18 Special instructions for version upgrade


Upgrade from the version before 3.2.20.4.18 to the version 3.2.20.4.18, because the NV space is expanded, this upgrade is special.

The specific upgrade steps are as follows:

1. First VONETS device restore the factory settings ;
2. Connect the VONETS device to the Internet;
3. Enter the configuration interface to upgrade firmware online :


Step 1: Click System Settings ----Firmware Upgrade---- Upgrade;

1) Click "Upgrade" for downloading;

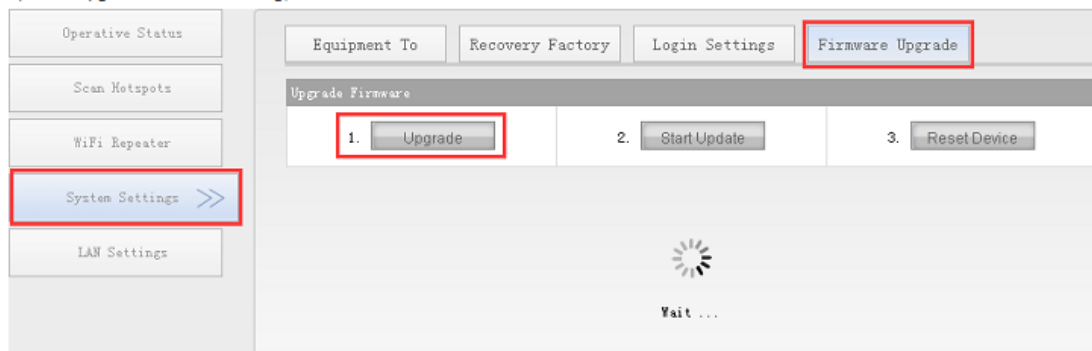

Step 2: After prompting that the upgrade file is downloaded successfully, click Start Upgrade;

2) Click "Start update" for updating;

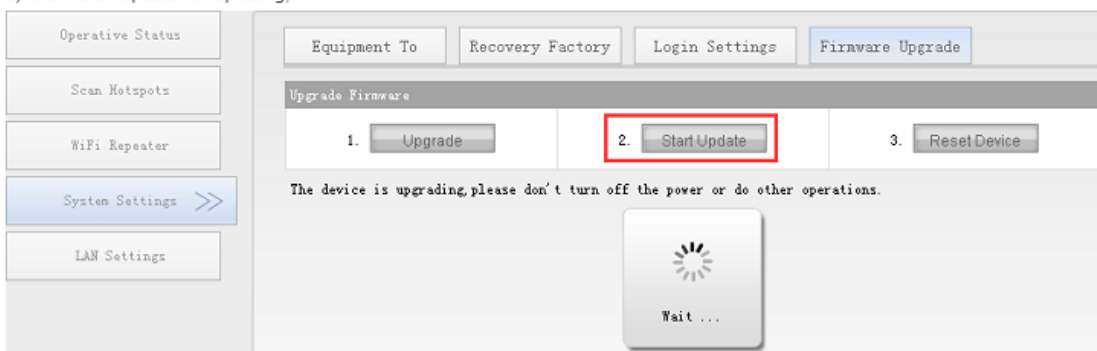

4. After the firmware upgrade is successful, please power off and restart the device, wait one minute, and then power off and restart the device. (In this step, there are two operations to restart the device after power off. One less step may lead to unsuccessful upgrade.);

5. After the blue light of the VONETS device flashes quickly, long press the reset button (VM300/VM5G and other module products refer to the method described in the product specification sheet for product reset), and then release it for 5 seconds. Until the blue light flashes again, the product upgrade is initialized.

DATE: April 21, 2020